

TECHNICAL BULLETIN TB-37

Issue No. 01
Date 21/11/06
Author RCB

TB 37

When exchanging the pump from the old to the new unit – ensure the oil seal is clean !!

This bulletin will always be attached to the unit

The alternator will be damaged if oil is allowed to leak into the unit.

When fitting the pump, ensure that the mating surfaces are clean and a new seal is installed.

Check for leaks after installation.